
WMBUS DATA FORMAT

TEMP/HUMIDITY/CO2 DEVICE (FX-WMBUS-E2-CO2)



Verify correct device and version

This document applies to the device FX-WMBUS-E2-CO2 with protocol version 10. There are two ways of finding out the protocol version of the device; either by looking at the label on the device or by looking at the data packets sent out by the device. See chapters [Error! Reference source not found.](#) and [Error! Reference source not found.](#) for more information.


Protocol version in data packets

If it is possible to check the information in the data packets sent out by the device, then the protocol version is included in the data field called *A-Field Protocol version*. For more information, see chapter [Error! Reference source not found.](#)

Protocol version in label

The protocol version can be found on the label. An example of the label is shown in the figure below and the relevant information is described by LAS.00030827.2A.0A, where

- **Manufacturer code:** LAS
- **Serial number:** 00030827
- **Device type:** 0x2A (42)
- **Protocol version:** 0x0A (10)

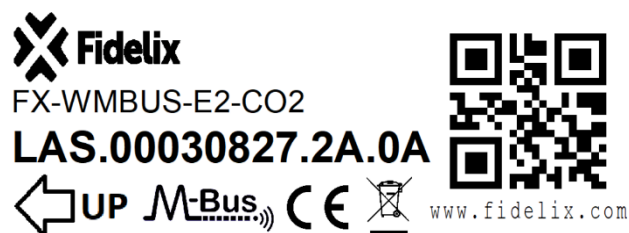

WMBUS-data format

Art nr.	FX-WMBUS-E2-CO2
Version	10 (0x0A)
Information	Packet is sent every 120 seconds in T-mode
DR1	Temperature: Last measured value
DR2	Temperature: Average last hour
DR3	Temperature: Average last 24 hours
DR4	Humidity: Last measured value
DR5	Humidity: Average last hour
DR6	Humidity: Average last 24 hours
DR7	CO2: Last measured value
DR8	CO2: Average last hour
DR9	CO2: Average last 24 hours
DR10	Last used calibration value
DR11	Minutes to next calibration
DR12	On Time in days (Since power up)
DR13	Operating time in days (Total)
DR14	Version
DR15	Status

Byte no	Field Name	Content	Info	Byte data	
1	L-Field	Length			Linklayer
2	C-Field	SND-NR		0x44	
3	M-Field	Meter Manufacturer code	LAS	0x33	
4	M-Field	Meter Manufacturer code		0x30	
5	A-Field	Meter serial number (LSB)	Example: 0001067	0x67	
6	A-Field	Meter serial number		0x00	
7	A-Field	Meter serial number		0x01	
8	A-Field	Meter serial number (MSB)		0x00	
9	A-Field	Protocol version		0x0A	
10	A-Field	Meter type	CO2-sensor device	0x2A	
11	CI-Field	Short header		0x7A	Networklayer
12	Access no.	Transmission counter	Example: 7	0x07	
13	Status	Device status (error/alarms)	Refer to Error! Reference source not found. for possible values	0x00	
14	Configuration	Number of encrypted blocks	Example: 3	0x03	
15	Configuration	Encryption		No encryption: 0x00 Encryption mode 5: 0x05	
16	AES-Verify	Encryption Verification		0x2F	DATA blocks
17	AES-Verify	Encryption Verification		0x2F	
18	DR1	DIF	16-bit integer	0x02	
19	DR1	VIF	External temperature 0.01°C	0x65	
20	DR1	Value (LSB)	Example: 0x1122	0x22	
21	DR1	Value (MSB)		0x11	
22	DR2	DIF	16-bit integer + Storage 1	0x42 = Value OK 0x72 = Not enough values	
23	DR2	VIF	External temperature 0.01°C	0x65	
24	DR2	Value (LSB)	Example: 0x4365	0x65	
25	DR2	Value (MSB)		0x43	
26	DR3	DIF	16-bit integer	0x82 = Value OK 0xB2 = Not enough values	
27	DR3	DIFE	Storage 2	0x01	
28	DR3	VIF	External temperature 0.01°C	0x65	
29	DR3	Value (LSB)	Example: 0x1122	0x22	
30	DR3	Value (MSB)		0x11	
31	DR4	DIF	16-bit integer	0x02	
32	DR4	VIF	Extension table	0xFB	
33	DR4	VIF	Relative humidity 0.1%RH	0x1A	
34	DR4	Value (LSB)	Example: 0x1122	0x22	
35	DR4	Value (MSB)		0x11	
36	DR5	DIF	16-bit integer + Storage 1	0x42 = Value OK 0x72 = Not enough values	
37	DR5	VIF	Extension table	0xFB	
38	DR5	VIF	Relative humidity 0.1%RH	0x1A	
39	DR5	Value (LSB)	Example: 0x1122	0x22	
40	DR5	Value (MSB)		0x11	
41	DR6	DIF	16-bit integer	0x82 = Value OK 0xB2 = Not enough values	
42	DR6	DIFE	Storage 2	0x01	
43	DR6	VIF	Extension table	0xFB	
44	DR6	VIF	Relative humidity 0.1%RH	0x1A	
45	DR6	Value (LSB)	Example: 0x1122	0x22	
46	DR6	Value (MSB)		0x11	

47	DR7	DIF	16-bit integer	0x02
48	DR7	VIF	Extension table	0xFD
49	DR7	VIF	Dimensionless	0x3A
50	DR7	Value (LSB)	Example: 0x1122	0x22
51	DR7	Value (MSB)		0x11
52	DR8	DIF	16-bit integer + Storage 1	0x42 = Value OK 0x72 = Not enough values
53	DR8	VIF	Extension table	0xFD
54	DR8	VIF	Dimensionless	0x3A
55	DR8	Value (LSB)	Example: 0x2233	0x33
56	DR8	Value (MSB)		0x22
57	DR9	DIF	16-bit integer	0x82 = Value OK 0xB2 = Not enough values
58	DR9	DIFE	Storage 2	0x01
59	DR9	VIF	Extension table	0xFD
60	DR9	VIF	Dimensionless	0x3A
61	DR9	Value (LSB)	Example: 0x0102	0x02
62	DR9	Value (MSB)		0x01
63	DR10	DIF	16-bit integer + Extension	0xC2
64	DR10	DIFE	Storage 3	0x01
65	DR10	VIF	Extension table	0xFD
66	DR10	VIF	Dimensionless	0x3A
67	DR10	Value (LSB)	Example: 0x2324	0x24
68	DR10	Value (MSB)		0x23
69	DR11	DIF	16-bit integer	0x82
70	DR11	DIFE	Subunit 1	0x40
71	DR11	VIF	Extension table	0xFD
72	DR11	VIF	Dimensionless	0x3A
73	DR11	Value (LSB)	Example: 0x0002	0x02
74	DR11	Value (MSB)		0x00
75	DR12	DIF	16-bit integer	0x82
76	DR12	DIF	16-bit integer	0x02
77	DR12	VIF	On Time Days	0x23
78	DR12	Value (LSB)	Example: 0x0000	0x00
79	DR12	Value (MSB)		0x00
80	DR13	DIF	16-bit integer	0x02
81	DR13	VIF	Total Operating Time Days	0x27
82	DR13	Value (LSB)	Example: 0x0000	0x00
83	DR13	Value (MSB)		0x00
84	DR14	DIF	16-bit integer	0x02
85	DR14	VIF	Extension table	0xFD
86	DR14	VIF	Version	0x0F
87	DR14	Value (LSB)	Example: 0x0004	0x04
88	DR14	Value (MSB)		0x00
89	DR15	DIF	8-bit integer	0x01
90	DR15	VIF	Extension table	0xFD
91	DR15	VIFE	Digital input	0x1B
92	DR15	Value	Refer to Table 1 for possible values	0x00

Table 1: Status byte with errors and alerts

Bit	Info
0 (0x01)	1 = Device is not activated
1 (0x02)	1 = Device is not activated
2 (0x04)	Low battery
3 (0x08)	X
4 (0x10)	CO2: Calibration not yet done
5 (0x20)	X
6 (0x40)	X
7 (0x80)	CO2: External sensor error

Version history

Version	Date	Name	Info
10.1	11.11.2022	Juha Rajanen	First version of the document.