
WMBUS DATA FORMAT

TEMP/HUMIDITY/CO2 DEVICE
(FX-WMBUS-E2-CO2)



Verify correct device and version

This document applies to the device FX-WMBUS-E2-CO2 with protocol version 10. There are two ways of finding out the protocol version of the device; either by looking at the label on the device or by looking at the data packets sent out by the device. See chapters Error! Reference source not found. and Error! Reference source not found. for more information.


Protocol version in data packets

If it is possible to check the information in the data packets sent out by the device, then the protocol version is included in the data field called *A-Field Protocol version*. For more information, see chapter Error! Reference source not found..

Protocol version in label

The protocol version can be found on the label. An example of the label is shown in the figure below and the relevant information is described by LAS.00030827.2A.0A, where

- **Manufacturer code:** LAS
- **Serial number:** 00030827
- **Device type:** 0x2A (42)
- **Protocol version:** 0x0A (10)

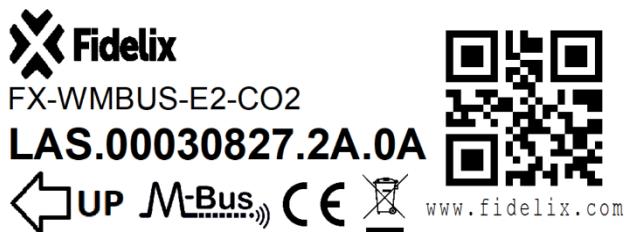

WMBUS-data format

Art nr.	FX-WMBUS-E2-CO2			
Version	10 (0x0A)			
Information	Packet is sent every 120 seconds in T-mode			
DR1	Temperature: Last measured value			
DR2	Temperature: Average last hour			
DR3	Temperature: Average last 24 hours			
DR4	Humidity: Last measured value			
DR5	Humidity: Average last hour			
DR6	Humidity: Average last 24 hours			
DR7	CO2: Last measured value			
DR8	CO2: Average last hour			
DR9	CO2: Average last 24 hours			
DR10	Last used calibration value			
DR11	Minutes to next calibration			
DR12	On Time in days (Since power up)			
DR13	Operating time in days (Total)			
DR14	Version			
DR15	Status			
Byte no	Field Name	Content	Info	Byte data
1	L-Field	Length		
2	C-Field	SND-NR		0x44
3	M-Field	Meter Manufacturer code	LAS Example: 0001067	0x33
4	M-Field	Meter Manufacturer code		0x30
5	A-Field	Meter serial number (LSB)		0x67
6	A-Field	Meter serial number		0x00
7	A-Field	Meter serial number		0x01
8	A-Field	Meter serial number (MSB)		0x00
9	A-Field	Protocol version		0x0A
10	A-Field	Meter type		0x2A
11	CI-Field	Short header		0x7A
12	Access no.	Transmission counter	Example: 7	0x07
13	Status	Device status (error/alarms)		Refer to Error! Reference source n ot found. for possible values
14	Configuration	Number of encrypted blocks		0x00
15	Configuration	Encryption		No encryption: 0x00 Encryption mode 5: 0x05
16	AES-Verify	Encryption Verification		0x2F
17	AES-Verify	Encryption Verification		0x2F
18	DR1	DIF	16-bit integer	0x02
19	DR1	VIF	External temperature 0.01°C	0x65
20	DR1	Value (LSB)	Example: 0x1122	0x22
21	DR1	Value (MSB)		0x11
22	DR2	DIF	16-bit integer + Storage 1	0x42 = Value OK 0x72 = Not enough values
23	DR2	VIF	External temperature 0.01°C	0x65
24	DR2	Value (LSB)	Example: 0x4365	0x65
25	DR2	Value (MSB)		0x43
26	DR3	DIF	16-bit integer	0x82 = Value OK 0xB2 = Not enough values
27	DR3	DIFE	Storage 2	0x01
28	DR3	VIF	External temperature 0.01°C	0x65
29	DR3	Value (LSB)	Example: 0x1122	0x22
30	DR3	Value (MSB)		0x11
31	DR4	DIF	16-bit integer	0x02
32	DR4	VIF	Extension table	0xFB
33	DR4	VIF	Relative humidity 0.1%RH	0x1A
34	DR4	Value (LSB)	Example: 0x1122	0x22
35	DR4	Value (MSB)		0x11
36	DR5	DIF	16-bit integer + Storage 1	0x42 = Value OK 0x72 = Not enough values
37	DR5	VIF	Extension table	0xFB
38	DR5	VIF	Relative humidity 0.1%RH	0x1A
39	DR5	Value (LSB)	Example: 0x1122	0x22
40	DR5	Value (MSB)		0x11
41	DR6	DIF	16-bit integer	0x82 = Value OK 0xB2 = Not enough values
42	DR6	DIFE	Storage 2	0x01
43	DR6	VIF	Extension table	0xFB
44	DR6	VIF	Relative humidity 0.1%RH	0x1A
45	DR6	Value (LSB)	Example: 0x1122	0x22
46	DR6	Value (MSB)		0x11

Linklayer

Networklayer

DATA blocks

47	DR7	DIF	16-bit integer	0x02
48	DR7	VIF	Extension table	0xFD
49	DR7	VIF	Dimensionless	0x3A
50	DR7	Value (LSB)		0x22
51	DR7	Value (MSB)	Example: 0x1122	0x11
52	DR8	DIF	16-bit integer + Storage 1	0x42 = Value OK 0x72 = Not enough values
53	DR8	VIF	Extension table	0xFD
54	DR8	VIF	Dimensionless	0x3A
55	DR8	Value (LSB)		0x33
56	DR8	Value (MSB)	Example: 0x2233	0x22
57	DR9	DIF	16-bit integer	0x82 = Value OK 0xB2 = Not enough values
58	DR9	DIFE	Storage 2	0x01
59	DR9	VIF	Extension table	0xFD
60	DR9	VIF	Dimensionless	0x3A
61	DR9	Value (LSB)		0x02
62	DR9	Value (MSB)	Example: 0x0102	0x01
63	DR10	DIF	16-bit integer + Extension	0xC2
64	DR10	DIFE	Storage 3	0x01
65	DR10	VIF	Extension table	0xFD
66	DR10	VIF	Dimensionless	0x3A
67	DR10	Value (LSB)		0x24
68	DR10	Value (MSB)	Example: 0x2324	0x23
69	DR11	DIF	16-bit integer	0x82
70	DR11	DIFE	Subunit 1	0x40
71	DR11	VIF	Extension table	0xFD
72	DR11	VIF	Dimensionless	0x3A
73	DR11	Value (LSB)		0x02
74	DR11	Value (MSB)	Example: 0x0002	0x00
75	DR12	DIF	16-bit integer	0x82
76	DR12	DIF	16-bit integer	0x02
77	DR12	VIF	On Time Days	0x23
78	DR12	Value (LSB)		0x00
79	DR12	Value (MSB)	Example: 0x0000	0x00
80	DR13	DIF	16-bit integer	0x02
81	DR13	VIF	Total Operating Time Days	0x27
82	DR13	Value (LSB)		0x00
83	DR13	Value (MSB)	Example: 0x0000	0x00
84	DR14	DIF	16-bit integer	0x02
85	DR14	VIF	Extension table	0xFD
86	DR14	VIF	Version	0x0F
87	DR14	Value (LSB)		0x04
88	DR14	Value (MSB)	Example: 0x0004	0x00
89	DR15	DIF	8-bit integer	0x01
90	DR15	VIF	Extension table	0xFD
91	DR15	VIFE	Digital input	0x1B
92	DR15	Value	Refer to Table 1 for possible values	0x00

Table 1: Status byte with errors and alerts

Bit	Info
0 (0x01)	1 = Device is not activated
1 (0x02)	1 = Device is not activated
2 (0x04)	Low battery
3 (0x08)	X
4 (0x10)	CO2: Calibration not yet done
5 (0x20)	X
6 (0x40)	X
7 (0x80)	CO2: External sensor error

Version history

Version	Date	Name	Info
10.1	11.11.2022	Juha Rajanen	First version of the document.